

Remote Crank Disconnect

The new UTV-SBI-15 now features a remote disconnect feature. This option allows for the user to make a wired connection to the "Crank" side of your ignition/starter circuit that will immediately disable the isolator while the starter is being cranked. Thus eliminating any opportunity for back feed through the isolator and/or connection cables that made exceed the associated amperage rating. To use this feature you will need to connect a wire from the 1/4"/6mm male blade receptacle to the "crank" side of your ignition circuit. This feature is not required to be connector for the isolator to function.

