

Installation Instructions

Honda Talon Intake Pre-filter Kit by 10-80 Dirt Sports

1. Remove the passenger side rear inner fender plastic to access the air box inlet connection.


REMOVAL/INSTALLATION

Remove the following:

- trim clips [1]
- snorkel cover [2]

S4D only: Release the wire clip [3].

Installation is in the reverse order of removal.

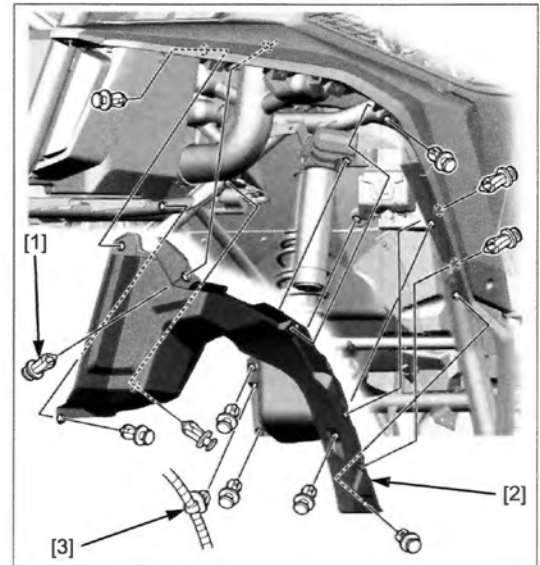

2. Remove the OEM air intake snorkel (1) from the air box inlet and remove the flexible inner fender seal curtain (2) attached to the fender and OEM snorkel. *
The flexible inner fender is attached to the OEM snorkel at several points.



Installation Instructions

Honda Talon Intake Pre-filter Kit by 10-80 Dirt Sports

3. Optional - remove the flexible inner fender seal curtain attached to the fender, OEM intake and air box. This is not required but there is no point to the part with pre-filter setup.



4. Remove the two 5mm Allen screws on top of the fender that hold fender plastics together. Use the provided template aligned with the fender screw holes to mark the new tube hole cut location on passenger fender. Cut the new fender tube hole with a hole saw or razor knife. The fender plastic is thin and soft.



Installation Instructions

Honda Talon Intake Pre-filter Kit by 10-80 Dirt Sports

5. Install the pre-filter tube through the newly cut fender hole. Insert lower tube into the air box inlet and align the cover plate holes. Attach the new pre filter cover plate to the fender with the two 5mm Allen fender screws and snug down and tighten the air box inlet hose clamp.



6. Reinstall the rear inner fender plastic.
7. Install the pre-filter on top of snorkel tube, then the Filterwears cover over the air filter.



**Thanks to HondaSXS Forum members Sandbaja and Adam490 for providing text and photos for these instructions.